


# LED Wall Surface - Side Mounting Instructions

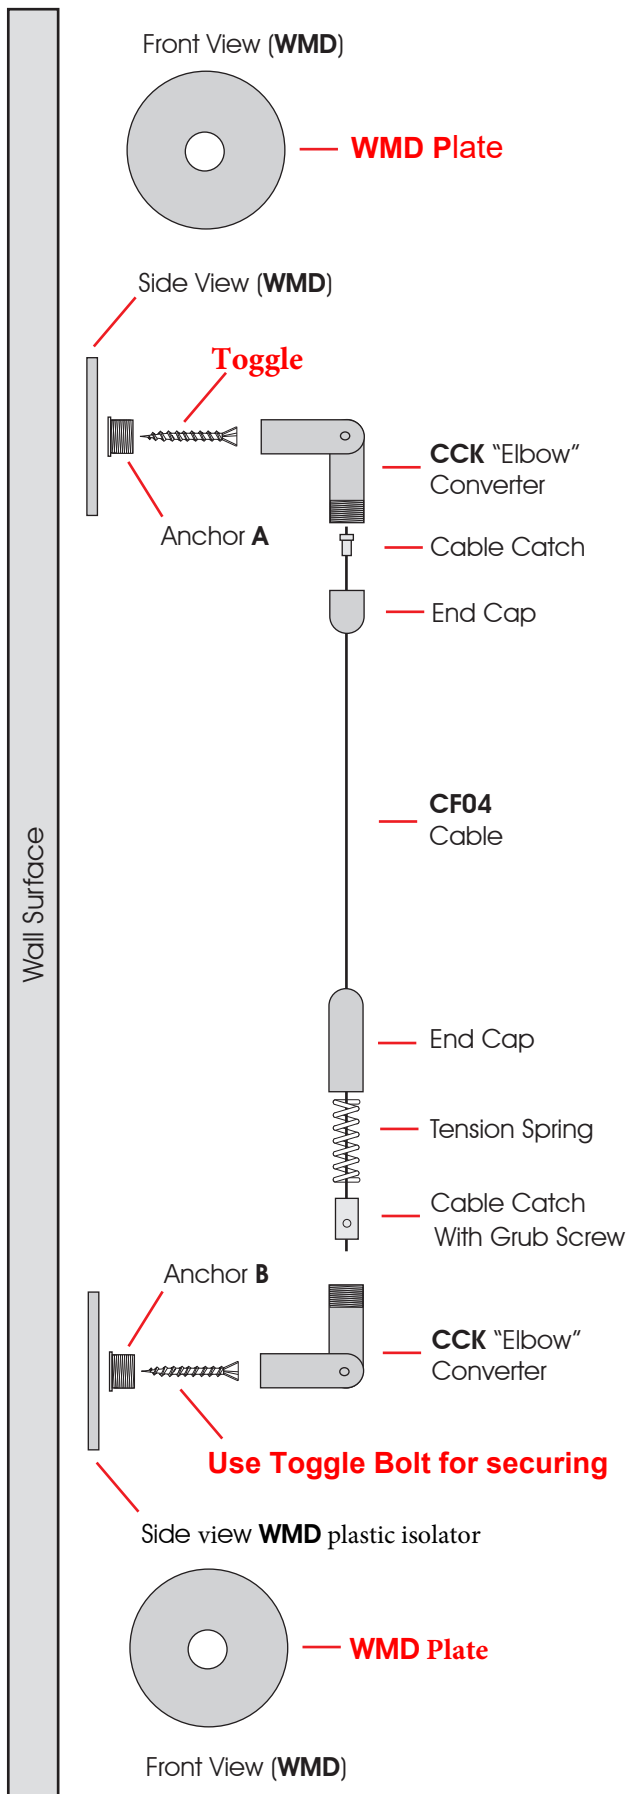

(1) Determine your display placement positions.  
(See Display Installation Instructions)

(2) Measure & mark cable mounting positions **on the side** of the wall. Begin at the bottom of the window frame.  
**(Template Provided)**

(3) Using Portable Drill through each of your marked measurements.

(4) Mount **Anchors (A and B)** on the top & bottom **wall surface**.

(5) Screw **CCK Elbow's** onto each Anchor position.

(6) Screw **CF04 Cable End Caps** onto the **Top CCK Elbows**.

(7) Unloosen Cable Catch on Bottom of the **CF04 Cables**.

(8) Slide Assembly Up & Pull Down **CF04 Cable** so that it lines up with the top of the **CCK Elbow** threads & cut **1/8"** above the threads.

(9) Re-tighten **CF04 Cable Catch** & screw assembly onto **CCK elbow**.

Repeat these steps with all cables.

## ACRYLIC & LED Display Cable Placement Distances

9-7/8" Apart for 8-1/2" x 11" Portrait Acrylics.

12-13/16" Apart for 11" x 8-1/2" Landscape Acrylics.

12-13/16" Apart for 11" x 17" Portrait Acrylics.

18-5/16" Apart for 17" x 11" Landscape Acrylics.

## LED Display Cable Placement Distances

10-1/4" Apart for 8-1/2" x 11" Portrait LED's.

**12-3/4" Apart for 11" x 8-1/2" Landscape LED's.**

12-3/4" Apart for 11" x 17" Portrait LED's.

**18-3/4" Apart for 17" x 11" Landscape LED's.**